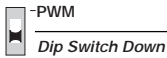


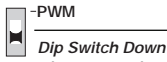




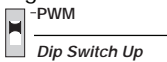


**Differential (Bang - Bang)** 

Setting the Differential on any control depends entirely on the actual operating characteristics of heating/cooling equipment in each specific application. Differential settings should normally be set as small as possible for greatest accuracy, but care must be taken to avoid short cycling of equipment. Experience, plus trial and error during actual operating conditions is usually the way most installers determine the correct differential setting.

**Delay (Bang - Bang)** 

Setting the time delay also depends on the actual operating characteristics of heating/cooling equipment in a specific application. With some equipment, time delays are unnecessary and the delay setting can be set to zero time delay. Other types of equipment depend on a fixed off delay to prevent damage to equipment components, particularly in the case of certain types of refrigeration equipment. Consult the manufacturer's operating and installation instructions for advice on recommended time delays.

**Differential (PWM)** 

The Differential setting determines the temperature range in which PWM action occurs. This setting should be adjusted to allow PWM action to occur the majority of the time. Cycle and Differential settings both affect relay "on" and "off" time.

**Cycle (PWM)** 

Cycle provides the greatest control of how often the relay is turning on and off when the measured temperature is in the differential range. Increasing Cycle will cause the relay to stay on and off longer (when temperature remains at setpoint). When controlling loads that respond slowly to the heating/cooling input, the Cycle should be long. When loads respond quickly to heating/cooling input, a short Cycle is used.

## Testing and Troubleshooting

If troubleshooting becomes necessary with the One Stage Setpoint Control 150, follow the testing procedure in step four of the installation procedure on page 2 of this brochure.

If the display window shows "Err", the sensor is either open or short circuited, or the sensor temperature is outside the temperature range of the control. If this type of fault occurs, the control will turn off its relay.

If you do not think the control is operating properly, check to see that the settings have been made correctly and that the problem is not a result of external causes. Make sure that all wiring connections are solid and the sensor is located in the correct location.

**Before you leave**

- Install the wiring cover over the wiring chamber and secure it with the screw provided.
- Place the front cover on the control to cover the setting dials and snap it into place.
- Place this brochure, and all other brochures relating to the installation, in the protective plastic bag supplied with the control.
- Place the bag in a conspicuous location near the control for future reference.
- It is important to explain the operation of this control within the system to the end user, and anyone else who may be operating the system.

## Limited Warranty and Product Return Procedure

**Limited Warranty** The liability of tekmar under this warranty is limited. The Purchaser, by taking receipt of any tekmar product ("Product"), acknowledges the terms of the Limited Warranty in effect at the time of such Product sale and acknowledges that it has read and understands same.

The tekmar Limited Warranty to the Purchaser on the Products sold hereunder is a manufacturer's pass-through warranty which the Purchaser is authorized to pass through to its customers. Under the Limited Warranty, each tekmar Product is warranted against defects in workmanship and materials if the Product is installed and used in compliance with tekmar's instructions, ordinary wear and tear excepted. The pass-through warranty period is for a period of twenty-four (24) months from the production date if the Product is not installed during that period, or twelve (12) months from the documented date of installation if installed within twenty-four (24) months from the production date.

The liability of tekmar under the Limited Warranty shall be limited to, at tekmar's sole discretion: the cost of parts and labor provided by tekmar to repair defects in materials and / or workmanship of the defective product; or to the exchange of the defective product for a warranty replacement product; or to the granting of credit limited to the original cost of the defective product, and such repair, exchange or credit shall be the sole remedy available from tekmar, and, without limiting the foregoing in any way, tekmar is not responsible, in contract, tort or strict product liability, for any other losses, costs, expenses, inconveniences, or damages, whether direct, indirect, special, secondary, incidental or consequential, arising from ownership or use of the product, or from defects in workmanship or materials, including any liability for fundamental breach of contract.

The pass-through Limited Warranty applies only to those defective Products returned to tekmar during the warranty period. This Limited Warranty does not cover the cost of the parts or labor to remove or transport the defective Product, or to reinstall the repaired or replacement Product, all such costs and expenses being subject to Purchaser's agreement and warranty with its customers.

Any representations or warranties about the Products made by Purchaser to its customers which are different from or in excess of the tekmar Limited Warranty are the Purchaser's sole responsibility and obligation. Purchaser shall indemnify and hold tekmar harmless from and against any and all claims, liabilities and damages of any kind or nature which arise out of or are related to any such representations or warranties by Purchaser to its customers.

The pass-through Limited Warranty does not apply if the returned Product has been damaged by negligence by persons other than tekmar, accident, fire, Act of God, abuse or misuse; or has been damaged by modifications, alterations or attachments made subsequent to purchase which have not been authorized by tekmar; or if the Product was not installed in compliance with tekmar's instructions and / or the local codes and ordinances; or if due to defective installation of the Product; or if the Product was not used in compliance with tekmar's instructions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, WHICH THE GOVERNING LAW ALLOWS PARTIES TO CONTRACTUALLY EXCLUDE, INCLUDING, WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, DURABILITY OR DESCRIPTION OF THE PRODUCT, ITS NON-INFRINGEMENT OF ANY RELEVANT PATENTS OR TRADEMARKS, AND ITS COMPLIANCE WITH OR NON-VIOLATION OF ANY APPLICABLE ENVIRONMENTAL, HEALTH OR SAFETY LEGISLATION; THE TERM OF ANY OTHER WARRANTY NOT HEREBY CONTRACTUALLY EXCLUDED IS LIMITED SUCH THAT IT SHALL NOT EXTEND BEYOND TWENTY-FOUR (24) MONTHS FROM THE PRODUCTION DATE, TO THE EXTENT THAT SUCH LIMITATION IS ALLOWED BY THE GOVERNING LAW.

**Product Warranty Return Procedure** All Products that are believed to have defects in workmanship or materials must be returned, together with a written description of the defect, to the tekmar Representative assigned to the territory in which such Product is located. If tekmar receives an inquiry from someone other than a tekmar Representative, including an inquiry from Purchaser (if not a tekmar Representative) or Purchaser's customers, regarding a potential warranty claim, tekmar's sole obligation shall be to provide the address and other contact information regarding the appropriate Representative.

<b>In North America:</b>	tekmar Control Systems Ltd., Canada tekmar Control Systems, Inc., U.S.A. Head office: 5100 Silver Star Road Vernon, B.C. Canada V1B 3K4 Tel. (250) 545-7749 Fax. (250) 545-0650
--------------------------	---